

10S Quick Reference

Type	Operation	Button Command	LED
Basic Function	Power on	Press the Phone Button and the Jog Dial for 1 second	Solid blue
	Power off	Press the Phone Button and the Jog Dial	Solid red
	Volume adjustment	Rotate the Jog Dial	-
Mobile phone	Mobile phone pairing	Press the Phone Button for 5 seconds	Blue & red alternatively flashing
	Second mobile phone pairing	Press the Jog Dial for 5 seconds	Red flashing
		Tap the Phone Button within 2 seconds	
	Answer mobile phone call	Tap the Phone Button or the Jog Dial	-
	End mobile phone call	Tap the Phone Button or press the Jog Dial for 2 seconds	-
	Voice dial	Tap the Phone Button	-
	Speed dial	Double tap the Phone Button	-
Reject incoming call	Press the Jog Dial for 2 seconds	-	
Intercom	Intercom pairing	Press the Jog Dial for 5 seconds	Red flashing
		Tap the Jog Dial of any one of the two headsets	
	Start/End each intercom	Tap the Jog Dial	-
	End all intercoms	Press the Jog Dial for 1 second	Blue flashing
	Start Group Intercom	Press the Jog Dial for 3 seconds	Green flashing
	End Group Intercom	Press the Jog Dial for 1 second	-
Music	Play/Pause Bluetooth music	Press the Jog Dial for 1 second	-
	Track forward/back	Rotate the Jog Dial while pressing	-
FM Radio	FM radio on/off	Press the Phone Button for 1 second	-
	Select preset	Tap the Phone Button	-
	Seek stations	Rotate the Jog Dial while pressing	-
	Start/Stop scanning FM band	Double tap the Phone Button	-
	Save preset while scanning	Tap the Phone Button	-
Reset	Factory reset	Press the Phone Button for 10 seconds	Solid red
		Tap the Jog Dial within 10 seconds	
	Fault reset	Press the Reset Button	-